


POWAPACK™

Thank you for purchasing your PowaKaddy product. Please follow all instructions for safe use and to get the best out of your new PowaKaddy PowaPack™.

Charging

1. Before the first use, please fully charge the PowaPack™ using the USB -micro cable provided:
2. Insert the USB-micro connector into the port on the left-hand side of the PowaPack™ as marked on the rear of the case.
3. Plug the USB-A connector on the other end of the cable into a USB-A charging port. (A computer or wall socket is advised).
4. As the PowaPack™ charges, the indicator light(s) will flash.
5. As the charge increases, the number of indicator lights illuminated will increase.
6. Once all four lights are illuminated, (not flashing) the pack is fully charged. At this point, the PowaPack™ will automatically turn off. Please remove it from charge.
7. Depending on the level of discharge (and supply current of the charging device), the PowaPack™ may take up to 8 hours to fully charge.

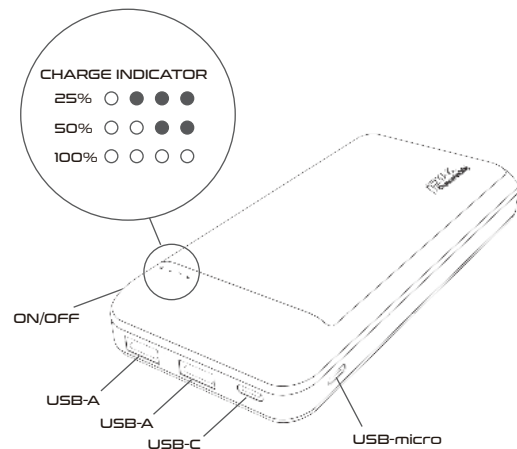

Warning:

- Only charge the PowaPack™ indoors on a hard surface.
- Do not cover the PowaPack™ during charging.
- Only use the USB-micro cable supplied in the box.
- Remove the pack from charge after 8hrs.
- Do not charge via PowaKaddy Electric Trolley USB ports.
- To preserve the lifespan of the PowaPack™, use and recharge at least once every four months.

Use with PowaKaddy ThermaMitts™

1. Once at the course, attach the ThermaMitts™ to the trolley handle.
2. Connect the Male USB-C running from the ThermaMitts™ into the USB-C Female end of the long extension cable provided with the PowaPack™.
3. Plug the USB-A end of the Extension cable into the PowaPack™.
4. When plugged into the PowaPack™, The ThermaMitts™ LED button will cycle through the heat setting colours. Once this has completed, press, and hold the LED button to turn the mitts on.
5. Press the LED button to toggle through the High, Medium, and Low heat settings.
6. Place the PowaPack™ in an empty pocket in your golf bag where it will be secure and completely dry.
7. Once you have completed your round, power off the PowaPack™ by double pressing the on/off button located on the right-hand side.
8. Once home, remember to charge the PowaPack™ and then store in a dry place out of direct sunlight.

Charging other Electrical Devices

1. Connect your smartphone or GPS device to the PowaPack™. (We always advise to use the cables supplied with your electronic devices or approved by your electronics device manufacturer).
2. The PowaPack™ in most instances will turn on automatically but on some occasions, you may need to press the on/off button located on the right-hand side.
3. Place the PowaPack™ in an empty pocket in your golf bag where it will be secure and completely dry.

4. Once you have completed your round, power off the PowaPack™ by double pressing the on/off button located on the right-hand side.
5. Once home, remember to charge the PowaPack™ and then store in a dry place out of direct sunlight.

Warning:

- Do not plug the PowaPack™ directly into the trolleys USB ports.
- Do not plug the Extension Cable directly into the trolleys USB ports. (The Extension cable is for use with the PowaPack™ only).
- Ensure the Extension cable does not snag or get caught during use. Keep away from moving parts.
- Do not add other items to the bag pocket that holds the PowaPack™
- Ensure the PowaPack™ is always stored in a dry location.

Safety

1. Do not splash or immerse in liquids.
2. Do not store or charge the PowaPack™ in locations where the temperatures may exceed below -10° (14° F) or above 40° C (105° F) such as outdoor sheds or metal buildings in summer.
3. Only charge using the USB-micro cable supplied in the box.
4. Never use or charge the PowaPack™, if damaged, submerged in water or other liquids.
5. There are no serviceable parts within the PowaPack™. Do not attempt to open or attempt a repair. Risk of Electric Shock or Fire.
6. The PowaPack™, is a sealed unit. In the unlikely event liquid leaks from the PowaPack™, do not touch the liquid as it may cause irritation or burns.
7. If contact with skin made, follow the precautions listed below:
 - Skin contact – Wash with soap and water.
 - Inhalation – Expose to fresh air and seek medical advice.
 - Eye contact – Immediately wash with water for at least 15 minutes. Seek medical attention.
8. Disposal – wear gloves to handle the battery and dispose of immediately; contact your local council or recycling centre.
9. Do not incinerate the PowaPack™, even if damaged.
10. Do not drop or use this product in high

temperatures above 40°C.

11. If the battery swells or deforms, stop using it immediately.

Disposal

At the end of its useful life, please discard the PowaPack™ with due care for the environment.

- If possible, run down the PowaPack™ completely.
- Take the PowaPack™ to your local recycling centre.

Warranty

PowaKaddy provides a 12-month Manufacturer's Limited Warranty against inherent defects for the PowaKaddy PowaPack™ purchased from an authorised retailer on the exclusions and conditions, set out hereafter:

1. Accidental damage, customer misuse or neglect.
2. Fair wear and tear.
3. Unauthorised modification to the Product.
4. Failure to follow battery charging instructions, including leaving a PowaPack™ in a discharged state for prolonged periods.
5. A valid original receipt of purchase must be presented upon request of a warranty claim.
6. The Warranty is not transferable.

This warranty is in addition to and does not affect the consumer's statutory rights. Further information in respect of these statutory rights can be obtained from your local Trading Standards Department, Citizen's Advice Bureau, or Consumer Centre.

For further information, please visit PowaKaddy.com